

YOKOHAMA FRAME


ASSEMBLY INSTRUCTIONS

Thank you for choosing our product.

This practical design offers the utmost in versatility.


Before assembling your Yokohama, please read through these instructions carefully, familiarising yourself with the different parts.


Please note that you will require an Allen Key.

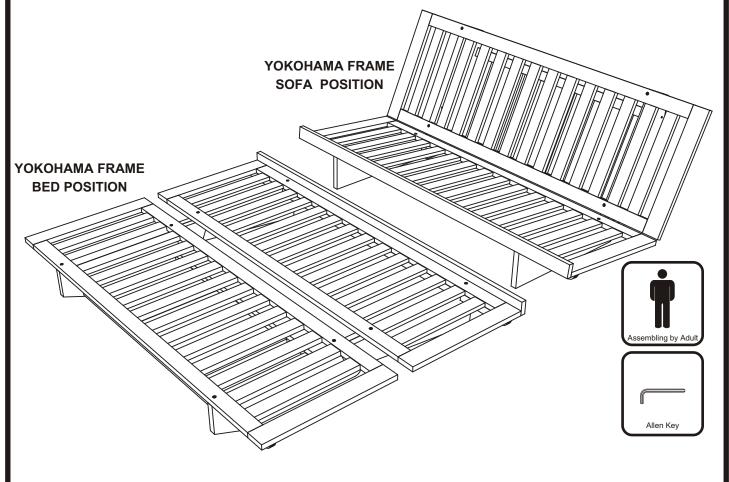



YOKOHAMA FRAME SHOWN COMPLETED ASSEMBLED


HARDWARE

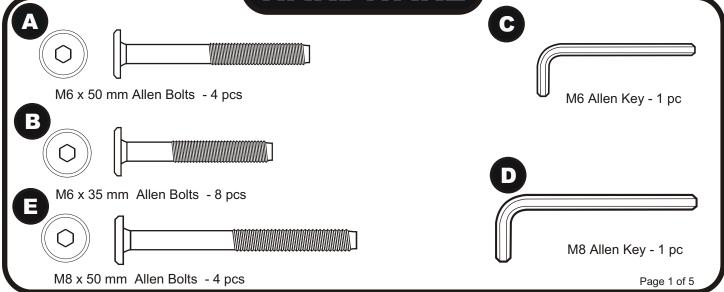


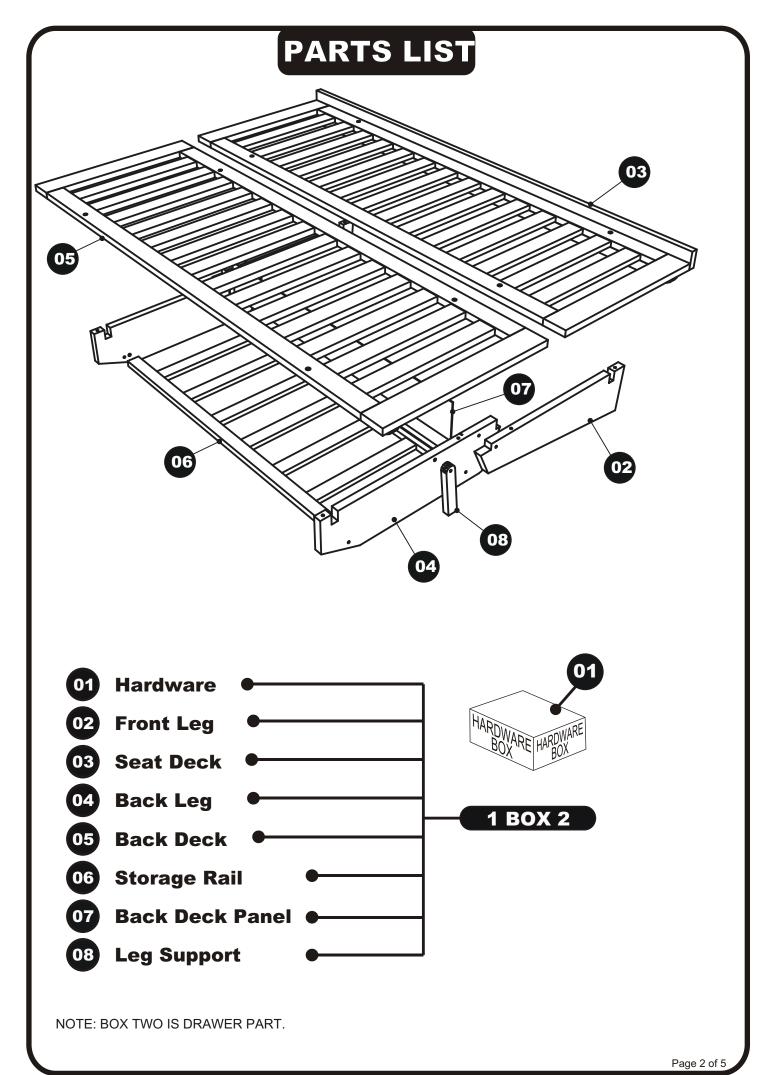

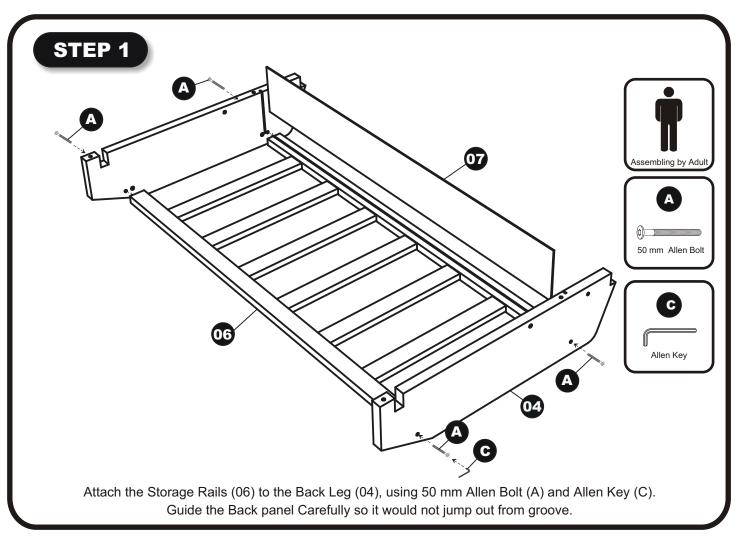

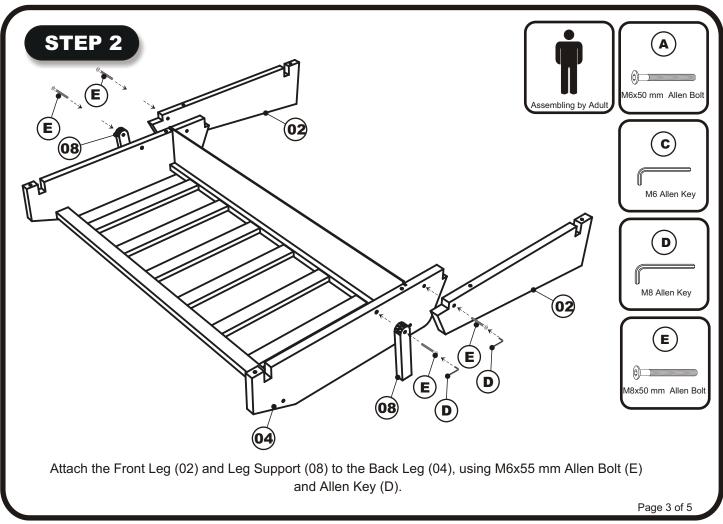

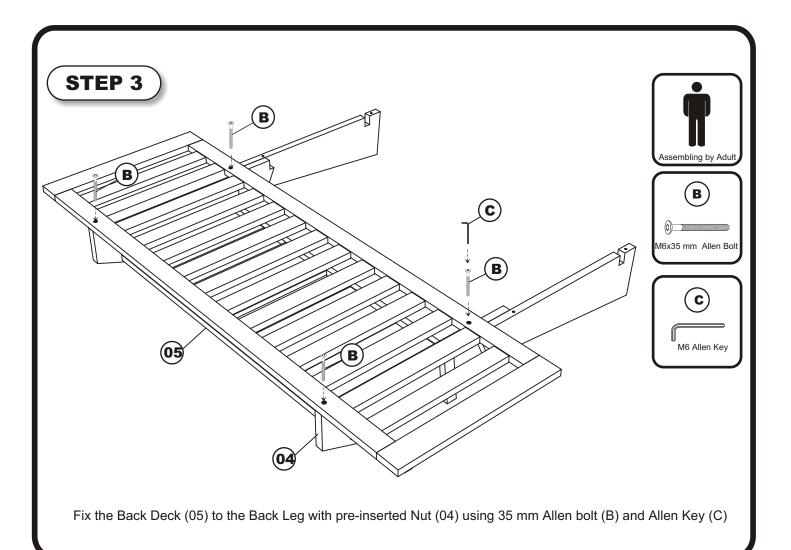

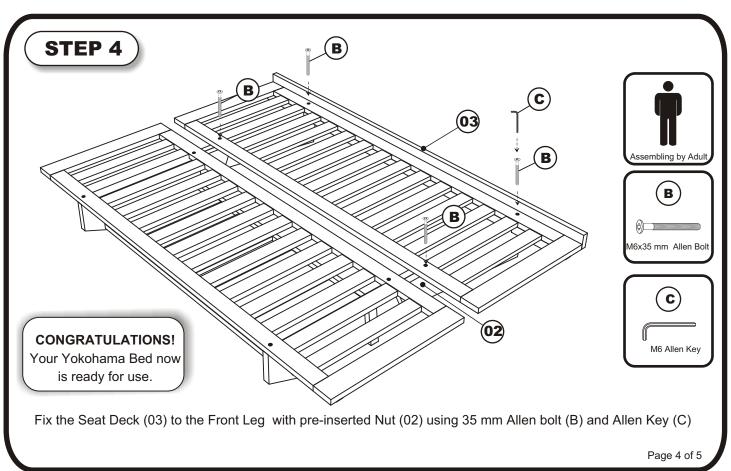






YOKOHAMA FRAME

OPERATION INSTRUCTIONS

 
After all Part assembly, Yokohama in bed position

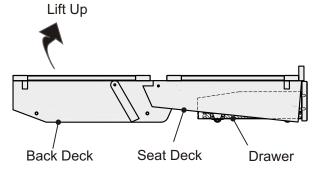




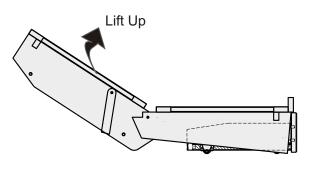


Until the Seat Deck fully down on the floor

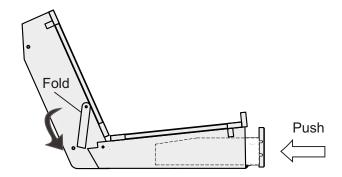

Yokohama in Sofa Position. Fold Leg Support to lock the Back Deck and Seat Deck as shown. Push the Drawer in.

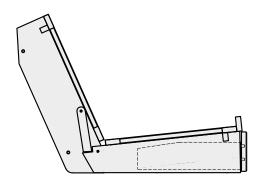

Sofa Position Complete

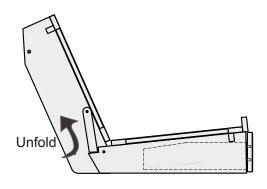

Unfold Leg Support to unlock the Back Deck and Seat Deck as shown.

Pull the Back Deck down until lay on the floor.